



MANUAL

for heat presses

Secabo TC5 and TC7

Congratulations on your purchase of your Secabo heat press! In order to work professionally with the machine and start production, please make sure you read this manual carefully. Reproduction of this manual requires written consent of Secabo GmbH. Errors and amendments of technical details excepted, all rights reserved. Secabo GmbH is not liable for any direct or indirect damages caused by the use of this product.

Version 1.0 (08.02.2013)

Overview

Secabo TC5, TC7 heat presses

The new Secabo TC5 and TC7 clam presses are automatically opening clamshell presses. It is not necessary to wait, while the transfer is pressed. After the desired timer has finished, the heat presses open automatically and announce this with an acoustic signal (3 seconds before the end). With a large digital controller, temperature and pressing time can be adjusted. A counter counts the number of transfers that have already been made during the current session. The counter can be reset at any time. The contact pressure can be adjusted with a wheel on the surface of the heat plate. A quick change system for the Secabo TC5 und TC7 as well as different exchangeable base plates are also available.

- press opens automatically
- digital controller for temperature, time and counter
- easily adjustable contact pressure
- suitable for caps and hats in all common sizes
- suitable for all common transfer methods


Safety precautions

Please read these instructions and safety precautions carefully before using your press for the first time!

- Never reach into the heat press with your hands when it is connected to the power supply, particularly when it is switched on and heated up – danger of severe burns!
- Never open the housing or attempt to modify the machine yourself.
- In case you are requested by the Secabo customer support to open the heating plate cover, please make sure you are wearing respiratory protection and only touch the contained insulation wool with gloves. Any disposal of the wool must be contained in a closed bag.
- Ensure that liquids and metal objects do not get into the inside of the heat press.
- Ensure that the power socket used is grounded. Note that it is only permissible to operate a heat press from a power socket protected by a ground fault protection switch..
- Disconnect machine from power outlet when not in use!
- Never operate the heat press within the reach of children and never leave the machine unsupervised when switched on.
- Ensure that the machine is used only in dry rooms.


If you cannot observe one or more of the safety precautions above, or if you are not sure whether all points are satisfied, please contact our Technical Support Department.

Machine description

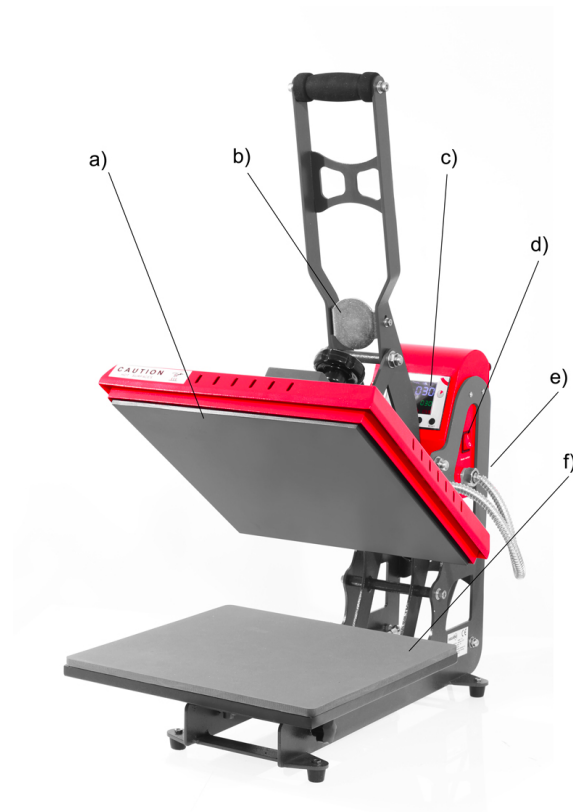

- a. Heating plate
- b. Magnet plate, electro magnet not shown
- c. Digital controller for time, temperature and the counter
- d. ON / OFF switch
- e. Connection for power supply and automatic fuse (not shown)
- f. Base plate

Controller

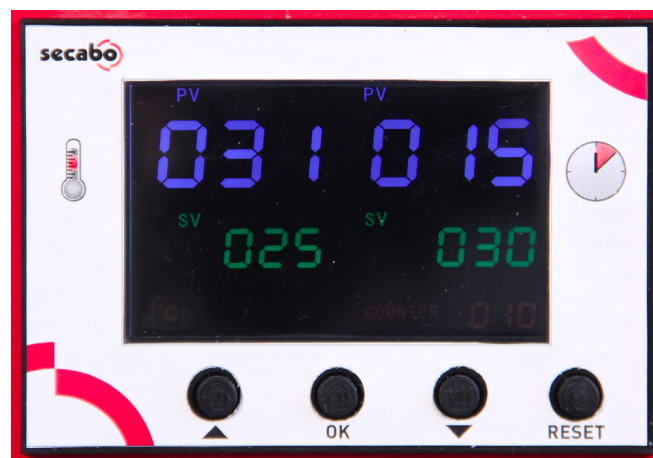

With a large digital controller, temperature ($^{\circ}\text{C}$ und $^{\circ}\text{F}$) and pressing time can be adjusted. The green digits are showing the theoretical value, the white digits are showing the actual value. A

counter (at the right bottom) counts the number of transfers that have already been made during the current session. The counter can be reset at any time.

Operation

- Connect the heat press to a 230 V power socket using the connection cable supplied.
- Switch on the press with the red rocker switch.
- After a short self-test lines appear in the display.
- Press the OK button.
- Use “UP” or “DOWN” to set °C or °F and press OK.
- Use “UP” or “DOWN” to set the desired temperature and press OK.
- Use “UP” or “DOWN” to set the desired time and press OK.
- You can now make the first transfers. The timer starts running as soon as the press is closed with the press lever.
- 3 seconds before the end a warning signal sounds. After the set time has expired, the press opens automatically.
- The contact pressure can be adjusted with a wheel on the surface of the press. Clockwise rotation causes less pressure - counter clockwise rotation causes more pressure.
- The settings cannot be changed during pressing.
- Each time the pressing process is completed, the counter display increments by one after the set time has expired.
- You can reset the counter by pressing RESET for longer than 5 seconds.

Note: Please note that a certain time is required before the press cools down after it is switched off.

Maintenance and cleaning

Maintenance work should always be accomplished with the press switched off and cooled down. The plug must first be disconnected from the power socket. Consult Technical Support before carrying out any maintenance work.

Clean the press regularly with a soft cloth and mild household cleaner to remove adhesive residues etc. Never use scouring sponges, solvents or gasoline!

Recommended times and temperatures

These values are only guidelines; they can vary from material to material and should always be checked before pressing.

Material	Temperature	Pressure	Time
Flock film	170°C - 185°C	light-medium	25s
Flex film	160°C - 170°C	medium-high	25s
Sublimation flex	180°C - 195°C	medium-high	10s - 35s
Sublimation on ceramic mugs	200°C	medium-high	150s - 180s
Sublimation on tiles	200°C	high	120s - 480s (depending on thickness of material)
Sublimation on jigsaw puzzles	200°C	light-medium	25s
Sublimation mousepads	200°C	medium	20s - 40s
Sublimation on textiles	200°C	medium-high	30s - 50s
Sublimation on metal plates	200°C	high	10s - 50s (depending on thickness of material)

Important note: You should carry out your own tests with the transfer material and backing to be used before starting production. The values given above and the manufacturer's own figures are only intended as a guide. You should establish the washability and behaviour during transfer in your own tests.

The recommended values do not imply a guarantee. The user is responsible for determining and using the appropriate setting for his particular conditions.


Note for textile work: After pressing, allow textiles to cool down before removing any type of backing from the transfer material. The hot glue in the transfer material develops its adhesive force only in the cold state. If the adhesive does not stick in the cold state, it may have been pressed too cold or for too short a time.

Technical data

Heat press	Secabo TC5	Secabo TC7
Type	auto open heat press	auto open heat press
Work surface size	38cm x 38cm	40cm x 50cm
Max. temperature	225°C	225°C
Max. time setting	999s	999s
Max. contact pressure	250g/cm ²	250g/cm ²
Pressure adjustment	height adjustment of the base plate using the hand valve	height adjustment of the base plate using the hand valve
Power supply	230V / 50Hz - 60Hz, 1,8kW	230V / 50Hz - 60Hz, 2,0kW
Ambient conditions	+ 5°C - +35°C / 30% - 70% humidity	+ 5°C - +35°C / 30% - 70% humidity
Weight	35kg	45kg
Dimensions (W x H x D)	39cm x 50cm x 75cm	41cm x 50cm x 80cm

Statement of Conformity - Konformitätserklärung

We herewith declare under sole responsibility that the under „technical data“ mentioned product meet the provisions of the following EC Directives and Harmonized Standards:

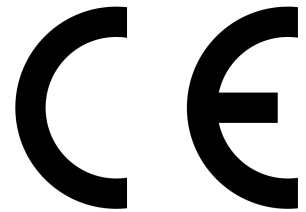

Hiermit erklären wir in alleiniger Verantwortung, dass das unter „Technische Daten“ genannte Produkt mit den Bestimmungen der folgenden EG-Richtlinien und Normen übereinstimmt:

EG-Richtlinien / EC Directives:

2006/95/EG Niederspannungsrichtlinie

2006/95/EC Low Voltage Directive

98/37/EG Maschinenrichtlinie (2006/42/EG ab 29.12.2009)

98/37/EC Directive on machinery (from 2009-12-29: 2006/42/EC)

Norm / Standard:

EN 60204-1:2006

Technische Dokumente bei / Technical documents at:

Secabo GmbH, Hochstatt 6-8, 85283 Wolnzach, Germany

A handwritten signature in dark ink, appearing to read 'Fabian Franke', written over a horizontal line.

Dipl. Ing. Fabian Franke

A handwritten signature in dark ink, appearing to read 'Bernhard Schmidt', written over a horizontal line.

Dipl. Ing.(FH) Bernhard Schmidt